


# VIKING

## STAGE LIGHTING

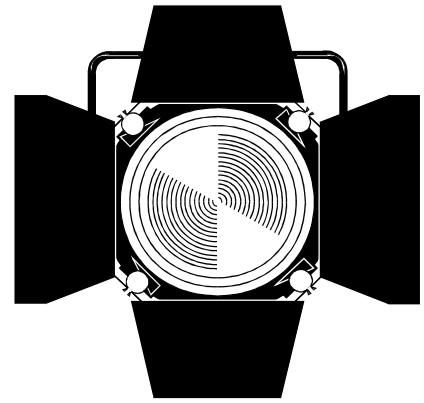

3W LED Par 64

Mode	Address (M dmx)	Mode
1 001	1 001-511	DMX Mode 1 - 1 Channel
2 001	2 001-511	DMX Mode 2 - 2 Channel
3 001	3 001-511	DMX Mode 3 - 3 Channel
4 001	4 001-511	DMX Mode 4 - 7 Channel
d 100	d 100-199	Red dimmer 0-100%
d 200	d 200-299	Green dimmer 0-100%
d 300	d 300-399	Blue dimmer 0-100%
d 400	d 400-499	Strobe 0-100%
F 01	F 01-15	Flow effect - fast to slow
C 01	C 01-15	Colour switch effect - fast to slow
S 0		Sound to light

Please note the LED address, for example 4012 would indicate the unit is set to Mode 4 (7 channel operation) And DMX starting address 12. Mode 4 is the standard operating mode.

Channel	Mode 1	Mode 2	Mode 3	Mode 4
1	Colour Macros	Colour Macros	Red	Red
2		Dimmer	Green	Green
3			Blue	Blue
4				Colour Macros
5				Strobe-slow to fast
6				Built in programs
7				Dimmer

Channel 6 DMX Value	Function
0-35	No function
36-71	Slow fade in to full then out
72-107	Full to slow fade out
108-143	Slow fade in to full then slow fade out
144-179	Continuous flow of all colours from slow to fast
180-251	Colour switching
252-255	Sound controlled

Note: from 31-143 the intensities only work if you also use Ch1 Ch2 or Ch3  
from 36-251 Ch5 controls the changing speed of the program

Unit C4 Rhombus Park, Diamond Road, Norwich, Norfolk, NR6 6NN.  
Telephone: (01603) 401982 Fax: (01603) 301982 Mobile: (07770) 422112  
Email: sales@vikinglighting.co.uk

