 


# VIKING

## STAGE LIGHTING

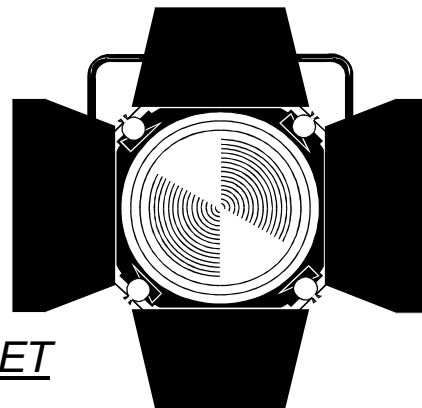

### LED BATTEN INSTRUCTION LEAFLET

 
#### 14 Channel DMX Mode

DMX Channel	Attributes	Values in DMX	Values in %
1	Off	0-3	0-1
	Light On	4-9	2-3
	Strobe	10-39	4-14
	Gradual X Colour Fade	40-69	15-26
	Auto 7 Colour Change	70-99	27-39
	Chase 1	100-110	40-42
	Chase 2 Red	111-121	43-47
	Chase 3 Green	122-132	48-51
	Chase 4 Blue	133-143	52-55
	Chase 5	144-154	56-59
	Chase 6	155-165	60-64
	Chase 7	166-176	65-68
	Chase 8	177-187	69-73
	Chase 9	188-198	74-77
	Chase 10	199-209	78-81
	Chase 11	210-220	82-85
	Chase 12	221-231	86-89
	Chase 1 - Chase 12	232-244	90-95
	Sound Chase	245-250	96-97
	Sound Strobe	251-255	98-100
2	4 Cell Dimmer	0-255	0-100
3	Cell 1 Red	0-255	0-100
4	Cell 1 Green	0-255	0-100
5	Cell 1 Blue	0-255	0-100
6	Cell 2 Red	0-255	0-100
7	Cell 2 Green	0-255	0-100
8	Cell 2 Blue	0-255	0-100
9	Cell 3 Red	0-255	0-100
10	Cell 3 Green	0-255	0-100
11	Cell 3 Blue	0-255	0-100
12	Cell 4 Red	0-255	0-100
13	Cell 4 Green	0-255	0-100
14	Cell 4 Blue	0-255	0-100




# VIKING

## STAGE LIGHTING

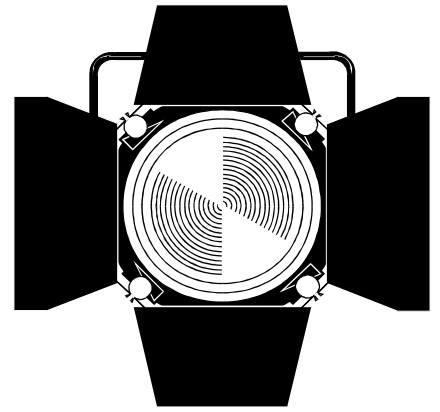


### 8 Channel DMX Mode

 DMX Channel	Attributes	Values in DMX	Values in %
1	Off	0-3	0-1
	Light On	4-9	2-3
	Strobe	10-39	4-14
	Gradual X Colour Fade	40-69	15-26
	Auto 7 Colour Change	70-99	27-39
	Chase 1	100-110	40-42
	Chase 2 Red	111-121	43-47
	Chase 3 Green	122-132	48-51
	Chase 4 Blue	133-143	52-55
	Chase 5	144-154	56-59
	Chase 6	155-165	60-64
	Chase 7	166-176	65-68
	Chase 8	177-187	69-73
	Chase 9	188-198	74-77
	Chase 10	199-209	78-81
	Chase 11	210-220	82-85
	Chase 12	221-231	86-89
		Chase 1 - Chase 12	232-244
	Sound Chase	245-250	96-97
	Sound Strobe	251-255	98-100
2	4 Cell Dimmer	0-255	0-100
3	Cell 1+2 Red	0-255	0-100
4	Cell 1+2 Green	0-255	0-100
5	Cell 1+2 Blue	0-255	0-100
6	Cell 3+4 Red	0-255	0-100
7	Cell 3+4 Green	0-255	0-100
8	Cell 3+4 Blue	0-255	0-100

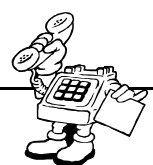

# **VIKING**
 
## **STAGE LIGHTING**

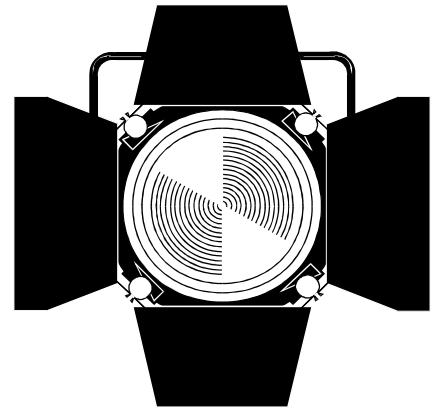

### **5 Channel DMX Mode**

DMX Channel	Attributes	Values in DMX	Values in %
1	Off	0-3	0-1
	Light On	4-9	2-3
	Strobe	10-39	4-14
	Gradual X Colour Fade	40-69	15-26
	Auto 7 Colour Change	70-99	27-39
	Chase 1	100-110	40-42
	Chase 2 Red	111-121	43-47
	Chase 3 Green	122-132	48-51
	Chase 4 Blue	133-143	52-55
	Chase 5	144-154	56-59
	Chase 6	155-165	60-64
	Chase 7	166-176	65-68
	Chase 8	177-187	69-73
	Chase 9	188-198	74-77
	Chase 10	199-209	78-81
	Chase 11	210-220	82-85
	Chase 12	221-231	86-89
	Chase 1 - Chase 12	232-244	90-95
	Sound Chase	245-250	96-97
	Sound Strobe	251-255	98-100
2	4 Cell Dimmer	0-255	0-100
3	All Cells Red	0-255	0-100
4	All Cell Green	0-255	0-100
5	All Cell Blue	0-255	0-100



# VIKING

## STAGE LIGHTING

