


# ***VIKING***

## ***STAGE LIGHTING***

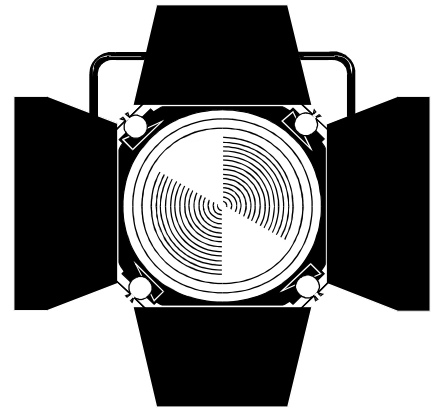

### **REAL FLAME TORCH INSTRUCTION LEAFLET**

1. Unscrew the top cap and slide on a Flame Torch Burner. Screw the top cap back on once the Flame Torch Burner is in position.

2. To light, simply apply an open flame to the Flame Torch Burner.

**For accelerated lighting:** Squeeze a few drops of lighter fuel at the base of the burner. The Royal Shakespeare Theatre Company, Welsh National Opera, Scottish National Opera and other volume users find that this is the quickest and safest way – whilst observing simple safety precautions, i.e. fuel is removed from the vicinity of lighting and the torch is held down away from adjacent objects when lit, then raised to performance height.

3. While in use, keep the 'Dead mans Handle' held down using the bolt and handle. This keeps the torch burning.

4. To extinguish the torch, release your grip on the 'Dead mans Handle' and the sheath will slide up to cover the burner, snuffing out the flame.

