


# VIKING

## STAGE LIGHTING

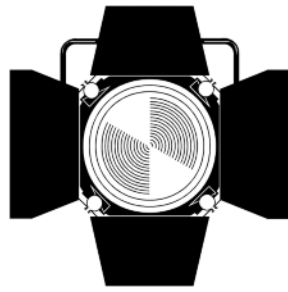


### MagicFX Swirl Fan Instructions



M125

#### PARTS

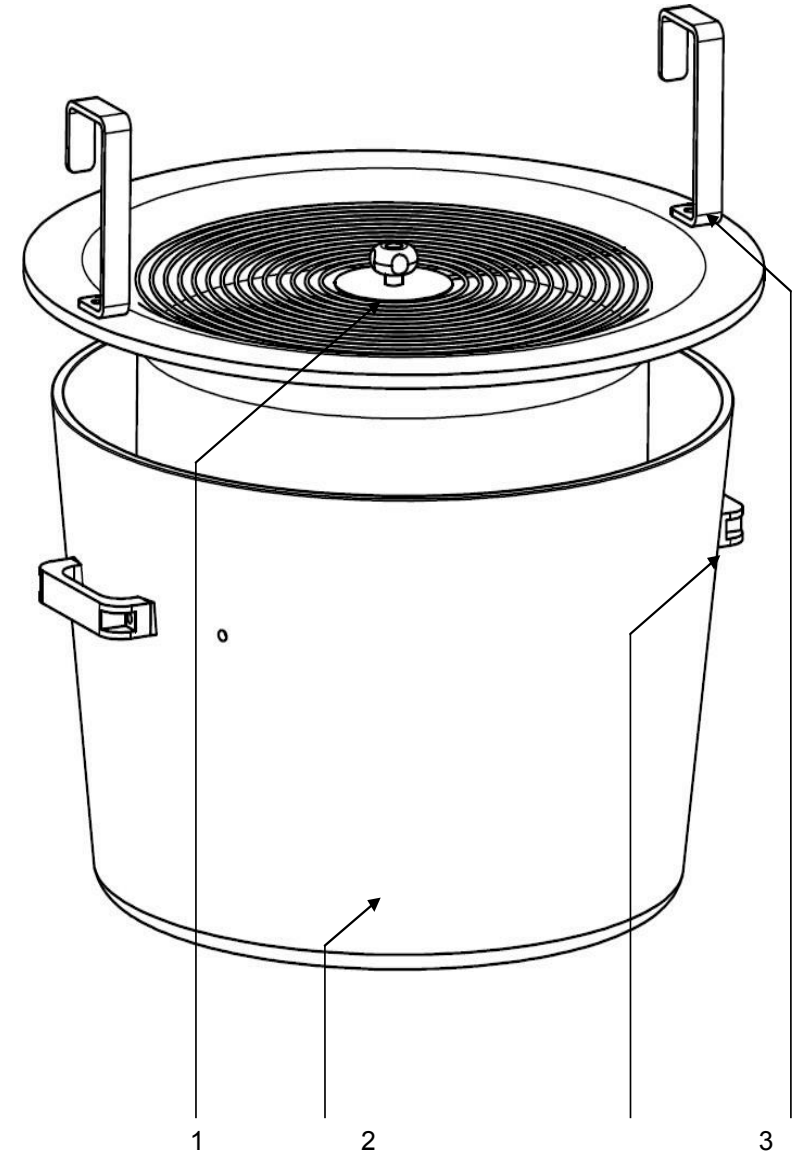

1. Grill mount
2. Confetti reservoir
3. Handle
4. Truss hook

## USING THE SWIRL FAN

Turn off the Swirl Fan on the dimmer or by unplugging from mains supply

1



Remove the grill by turning the locking knob

2



Fill the reservoir of the Swirl Fan with confetti. Max fill is 3kg confetti or snow and 4kg metallic glitter.



Make sure that the confetti stays under the blades of the fan so the blades are free to move.

If you overfill the unit, the blades can't move and the motor will be damaged.

3



Attach a 35kg Safety Bond to the reservoir of the Swirl Fan via the safety ring and the other end to the lighting barrel the Swirl is mounted on.

4



Place the grid back on the machine and

5.



Mount the Swirl Fan (XL) in a truss construction and make sure the truss clamps are connected tightly.

Connect the safety cable which is attached to the motor to the truss.

6.



Connect an IEC power cable to a 240V Socket or a dimmer to control speed and output of the unit.

## EMPTYING / RE-FILLING

Turn off the Swirl Fan on the dimmer or by unplugging from mains supply

7.



When the machine is disconnected from the power supply, and when the blades are not turning anymore, remove the grill to remove remaining confetti or to refill machine.

Please ensure Locking Knob is reattached after replacing the grill