


Channel No	15 Ch Mode	12 Ch Mode
1	Pan	Pan
2	Tilt	Tilt
3	Pan Fine	Pan/tilt speed
4	Tilt Fine	Strobe
5	Pan/tilt speed	Dimmer
6	Strobe	Red
7	Dimmer	Green
8	Red	Blue
9	Green	White
10	Blue	Colour Macro
11	White	Reset
12	Colour Macro	Zoom
13	Reset / Function	
14	Pan Tilt Reverse	
15	Zoom	

## Viking VK36 10 LED Wash Light



### LCD display description

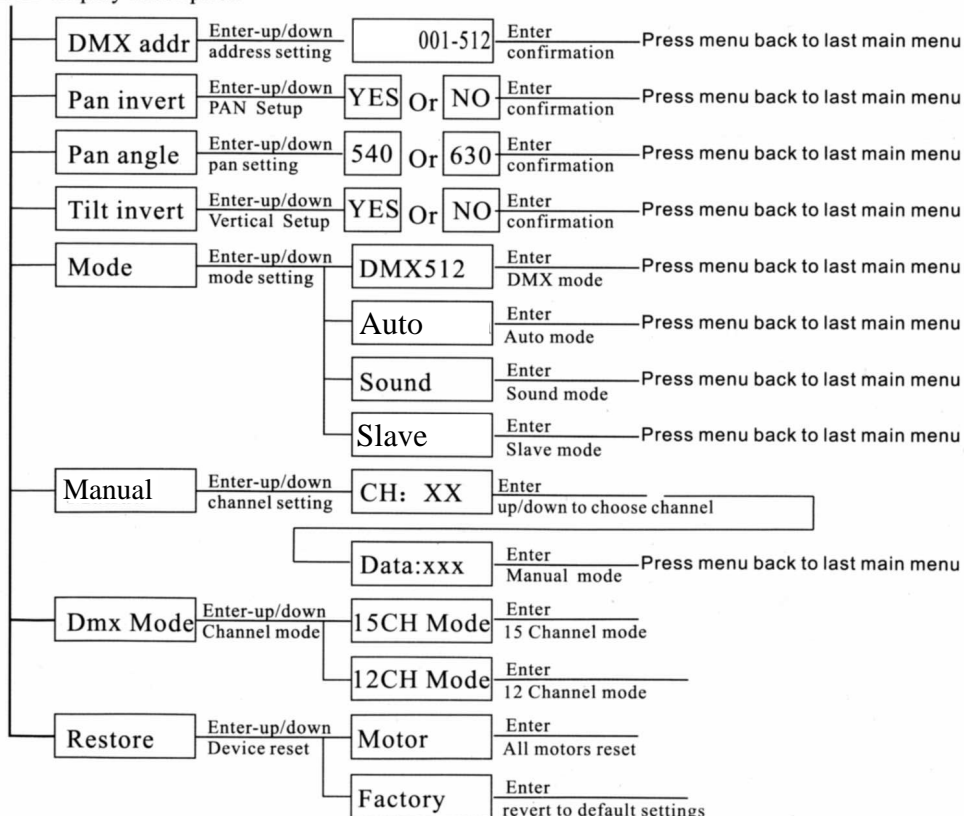

### Please Note:

Colour Macros from DMX 50-94 are a switching continuous colour effect, from 95-95 are fading continuous Colour effect and above 100 are various colour effects

Reset / Function Channel 13 0-15 no effect, 16-80 b/o while move, 96-110 Reset head after 3 sec pause, 126-175 auto mode, 191-240 sound activate

Zoom levels above 126 cause a zoom in & out effect - for general zoom keep this below 127